



## Kombinationsbeispiel 1

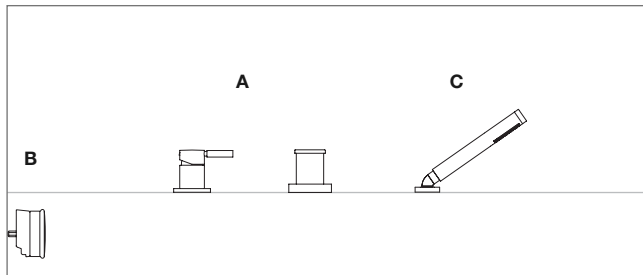


### Regeleinheit

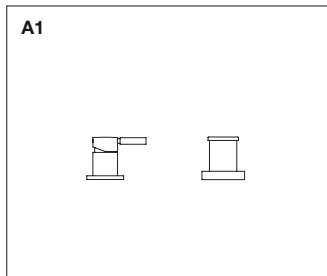


**A1** 1x 29 200 625-FF  
1x 29 140 979-FF

### Wanneneinlauf

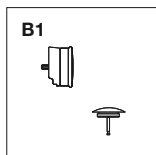


**B1** 1x 36 246 970-FF  
1x 35 247 970 90\*  
1x 36 150 970-FF  
1x 35 150 970 90

### Handbrause

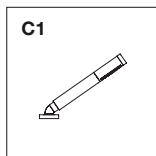


**C1** 1x 27 702 979-FF

### Perfecto Montagesystem (optional)

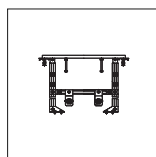


1x 12 613 970 90  
1x 12 801 970-FF


## Kombinationsbeispiel 2

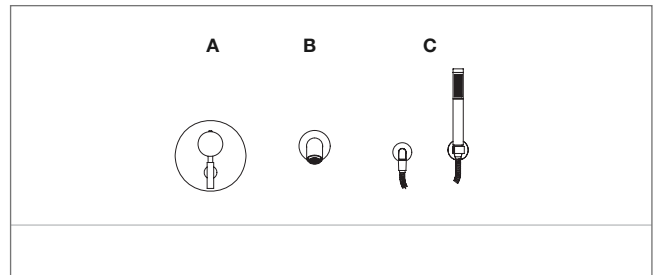

### Regeleinheit


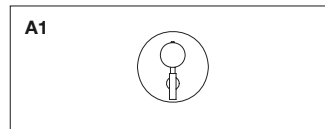


**A1** 1x 36 115 625-FF  
1x 35 115 970 90

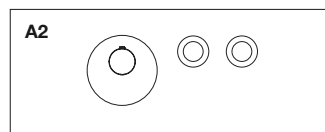

**A2** 1x 36 416 979-FF  
1x 35 516 970 90  
2x 36 310 979-FF  
2x 35 622 970 90



### Wanneneinlauf

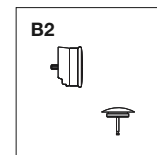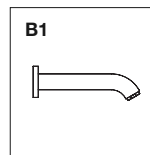

**B1** 1x 13 801 625-FF

**B2** 1x 36 246 970-FF  
1x 35 247 970 90\*  
1x 36 150 970-FF  
1x 35 150 970 90

### Handbrause

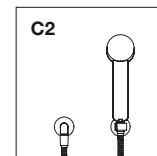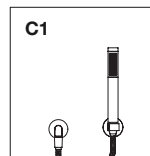

**C1** 1x 27 806 625-FF  
1x 28 450 625 90

**C2** 1x 27 805 625-FF  
1x 28 450 625 90



Meta.02